

4.4.3 PAUSE mode	4 - 25
4.4.4 DEBUG mode	4 - 25
4.4.5 Operation Mode Change	4 - 26
4.5 Functions	4 - 28
4.5.1 Restart mode	4 - 28
4.5.2 Self-diagnosis	4 - 30
4.5.3 Remote function	4 - 31
4.5.4 I/O Force On/Off function	4 - 32
4.5.5 Direct I/O Operation function	4 - 33
4.5.6 External Device Error Diagnosis function	4 - 33
4.6 Memory Configuration	4 - 36
4.7 I/O No. Allocation Method	4 - 38
4.8 Names of Parts	4 - 39

Chapter 5. BATTERY

5.1 Specifications	5 - 1
5.2 Handling Instructions	5 - 1
5.3 Battery Replacement	5 - 1

Chapter. 6 USING THE USER PROGRAM IN FLASH MEMORY

6.1 Structure	16 - 1
6.3 Handling	16 - 1

Chapter. 7 DIGITAL INPUT AND OUTPUT MODULES

7.1 Notes on Selecting Input and Output Modules	17 - 1
7.2 Digital Input Module Specifications	17 - 2
7.2.1 16-point 24VDC input module (source/sink type)	17 - 2
7.2.2 16-point 24VDC input module (source type)	17 - 3
7.2.3 32-point 24VDC input module (source/sink type)	17 - 4
7.2.4 32-point 24VDC input module (source type)	17 - 5
7.2.5 8-point 110VAC input module	17 - 6
7.2.6 8-point 220VAC input module	17 - 7
7.3 Digital Output Module Specifications	17 - 8
7.3.1 16-point relay output module	17 - 8
7.3.2 16-point transistor output module (sink type)	17 - 9

7.3.3 32-point transistor output module (sink type)	7 - 10
7.3.4 8-point triac output module	7 - 11

Chapter 8. POWER SUPPLY MODULE

8.1 Selection of power supply module	8 - 1
8.2 Specifications	8 - 2
8.3 Names of Parts	8 - 3

Chapter 9. BASE BOARD

9.1 Specifications	9 - 1
9.2 Names of Parts	9 - 1

Chapter 10. INSTALLATION AND WIRING

10.1 Installation	10 - 1
10.1.1 Installation Environment	10 - 1
10.1.2 Handling Instructions	10 - 4
10.1.3 Module Loading and Unloading	10 - 7
10.2 Wiring	10 - 9
10.2.1 Power Supply Wiring	10 - 9
10.2.2 Input and Output Devices Wiring	10 - 11
10.2.3 Grounding	10 - 11
10.2.4 Cable Specification for wiring	10 - 12

Chapter 11. MAINTENANCE

11.1 Maintenance and Inspection	11- 1
11.2 Daily Inspection	11- 1
11.3 Periodic Inspection	11- 2

Chapter 12. TROUBLESHOOTING

12.1 Basic Procedures of Troubleshooting	12- 1
12.2 Troubleshooting	12- 1
12.2.1 Troubleshooting flowchart used when the POWER LED turns OFF	12- 2
12.2.2 Troubleshooting flowchart used when the STOP LED is flickering	12- 3
12.2.3 Troubleshooting flowchart used when the RUN and STOP LEDs turns off	12- 4

12.2.4 Troubleshooting flowchart used when the output load of the output module does not turns on	12 - 5
12.2.5 Troubleshooting flowchart used when a program cannot be written to the CPU module	12 - 6
12.3 Troubleshooting Questionnaire	12 - 7
12.4 Troubleshooting Examples	12 - 8
12.4.1 Input circuit troubles and corrective actions	12 - 8
12.4.2 Output circuit troubles and corrective actions	12 - 9
12.5 Error Code List	12 - 11

Chapter 13. Dedicated Cnet communication for GM6

13.1 Introduction	13- 1
13.2 The example of system configuration	13- 2
13.3 The pin assignment of RS-232C connector of the GM6 dedicated Cnet communication	13- 3
13.4 Frame structure	13- 4
13.5 List of commands	13- 7
13.6 Data type	13- 8
13.7 Execution of commands (Ex.)	13- 9
13.8 Error code during NAK occurrence (for GM6 dedicated communication)	13- 29

APPENDICES

Appendix 1. System Definitions	APP 1 - 1
Appendix 2. Flag List	APP 2 - 1
Appendix 3. Function/Function Block List	APP 3 - 1
Appendix 4. Dimensions	APP 4 - 1