

Chapter 6. TEST RUN

6.1 Precautions in Test Run

REMARK

Please check the voltage level of input terminal is proper before the power is applied to the encoder.

For example, if 24 V is given for 5 V input, it can cause faults.

Check Items before the Power Is Applied.

1. Check if the input signal is 1-phase, or 2-phase.
2. Check if the adjustment of DIP switch according to input signal type.
3. Check the wiring on terminal block is correct.
4. Check if the external power is correct.