



## **Chapter 1. INTRODUCTION**

## **Chapter 2. SYSTEM CONFIGURATION**

<b>2-1 G6F - HSCA System Configuration .....</b>	<b>2-1</b>
--	------------

## **Chapter 3. SPECIFICATIONS**

<b>3-1 General Specifications.....</b>	<b>3-1</b>
<b>3-2 Performance Specifications.....</b>	<b>3-2</b>
<b>3-3 Function Description .....</b>	<b>3-4</b>
3.3.1 Operation Mode .....	3-4
3.3.2 Comparison Signal Output.....	3-6
3.3.3 Home Signal .....	3-8
3.3.4 Carry Signal .....	3-9
3.3.5 Borrow Signal .....	3-9
<b>3-4 High-speed Counter Function Block .....</b>	<b>3-10</b>

## **Chapter 4. INSTALLATION AND WIRING**

<b>4-1 Installation.....</b>	<b>4-1</b>
4.1.1 Installation Ambience.....	4-1
<b>4-2 Names of Parts .....</b>	<b>4-2</b>
<b>4-3 Interface with External Devices .....</b>	<b>4-6</b>
<b>4-4 Wiring Examples of the High-speed Counter Module.....</b>	<b>4-7</b>
<b>4-5 Output Mode of Encoder .....</b>	<b>4-8</b>
<b>4-6 Wiring Precautions .....</b>	<b>4-8</b>

## Chapter 5. PROGRAMMING

<b>5-1 Programming Examples .....</b>	<b>5-1</b>
5.1.1 Enable Counter Operation (CT_E) .....	5-2
5.1.2 Preset (PSET) .....	5-3
5.1.3 Setting Comparison Value (CMPD) .....	5-4
5.1.4 Setting Magnitude Comparison Values (CMP1, CMP2) .....	5-5
5.1.5 Reading Current Count Value(CNT) .....	5-6
5.1.6 Enabling Connector Output (OT_E).....	5-7
5.1.7 Coincidence Reset (EQ_R).....	5-8
5.1.8 Carry / Borrow Reset (CY_R) .....	5-9
5.1.9 Enabling Home Latch (HOME) .....	5-10
<b>5-2 Application Examples .....</b>	<b>5-11</b>

## Chapter 6. TEST-RUN

<b>6-1 Test-run Precautions .....</b>	<b>6-1</b>
---------------------------------------	------------

## Chapter 7. TROUBLESHOOTING

<b>7-1 Troubleshooting.....</b>	<b>7-1</b>
7.1.1 The LED Status of High Speed Counter Module.....	7-1
7.1.2 The Counting Status High Speed Counter Module.....	7-1
7.1.3 The Output Status of High Speed Counter Module .....	7-1
<b>7-2 Troubleshooting Procedure .....</b>	<b>7-2</b>
7.2.1 LED Indication Is Incorrect .....	7-2
7.2.2 Count Operations Do Not Execute .....	7-3
7.2.3 Counter Value Is Incorrect.....	7-4
7.2.4 Output Operations Do Not Execute .....	7-5

## Chapter 8. DIMENSIONS

<b>8-1 Dimensions .....</b>	<b>8-1</b>
-----------------------------	------------